

# Installation procedures



## Fixing the EcoloTOP lid to a waste bin

- 1) Remove the lid on the waste bin (if present).
- 2) Place an **EcoloTOP** lid with a metallic attachment system fixed to the plastic loop under the lid.
- 3) Adjust the size of the non-attached loop by pulling or pushing on the steel cable. Crush well the aluminium ring with an appropriate tool. Fix the loop to the interior of the waste bin with a screw and a metal washer.

**Other option:** Undo the non-attached loop by pulling the steel cable to get it out from one of the two holes of the aluminium ring. Place the end of the steel cable around a metallic part of the waste bin (e.g. the frame or a ring) and then in the free hole of the aluminium ring to form a loop of the desired size by pulling or pushing on the cable. Crush well the ring with an appropriate tool.

## Installation of the bags

- 1) Open the flap (under the optional lid, if present) by pulling firmly the handle upward.
- 2) Place a bag of 75 X 95 cm (30 X 38 in) in the waste bin and around the inverted U-shaped ring.
- 3) Close the flap by pushing it firmly on each side of the handle to fully secure the bag.

## Replacement of the bags

- 1) Open the flap (See "Installation of the bags", step 1).
- 2) Remove the bag from the inverted U-shaped ring.
- 3) Open completely the half-lid to remove the filled bag to be replaced.
- 4) Install a new bag of 75 X 95 cm (30 X 38 in) (See "Installation of the bags", steps 2 and 3).



**EcoloTOP**<sup>®</sup>  
[www.ecolotop.com](http://www.ecolotop.com)